

For Victorian Chandeliers that have a 3/4" round brass tube.

1118-EXT For Mission fixtures that use square 3/4"tube.


Both extension kits for Chandeliers, fit either 1/4 IPS or 1/8 IPS all-threads as we supply both adapters. AND they can add 65"to your light, but less, if you trim the kit.



557-PIC Picture Light Width: 10.25", Projection: 12" Height: 6.5", Canopy 5" Has a brass switch, adjustable shade. Reproduction from 1920 We have also seen this light used

very nicely over a restraurant table with low wattage bulb for ambience.



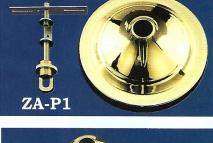





Two canopy kits **ZA-P1** (6"dia) and ZA-P2 (5"dia) for old chandeliers that might be missing canopy mount kits. Four types of chains

All fitters below are supplied with set screws as shown

ZV-2 Solid Brass 2 1/4" fitter ZV-3 Solid Brass 3 1/4" fitter ZV-4 Solid Brass 4" fitter **ZV-5** Rare early Victorian

to help you extend

the length of chain

ZA-11

All chain is sold by

the linear foot.

ZA-13

chandeliers

ZA-12

Crown and Spoke 4" fitter. Very delicate recreation. Comes with ball set screws.

ZV-6 Rare early Victorian Crown and Spoke 5" fitter. 5' fitters were used for a short time with gas chandeliers. Delicate recreation. Comes with ball set screws.

ZV-7 1900's style brass bell fitter for 2 1/4" shades. Slips 1/8 IPS thread; 2 5/8" tall

ZV-8 Rare early Victorian lovely pierced 4" fitter. Lovely re-creation. Comes with ball set screws. **ZV-9** Mission style brass


Canopy 010 Not Included RC 013 Vaulted MC Ceiling HC Mounting Kits

Vaulted ceiling mounting kits: 010LC Light duty Victorian 011HC Heavy duty Victorian 012RC Rococo adapting 013MC Mission style

ZV-11 Very rare re-creation of an early C.1840 gasolier fitter. Gas fixtures of this time used an unusual 2 5/8"size fitter. They also used different set screws. In fact, they used two bent prongs and one screw to hold the shade on. We changed this since original gas shades of this era can now cost 50 to 200 dollars

each. We make our fitter with three screws for a more gentle mounting. Made by lost wax casting, it is authentic in every way. The center hole slips 1/8 IPS lamp thread. Rare fitter screws have been recreated and are supplied. A simple design to match any rococo light.


ZV-1 Brass plated, Clamp on fitter. Clamps onto a metal socket (not porcelain) and then you can add a shade with a 2 1/4" fitter. A very common use is for bridge lamps, but also used on any fixture without a fitter but with a metal socket.



brass bell fitter for 2 1/4" shades. Slips 1/8 IPS thread; 2 5/8" tall; and supplied with nice ball set screws. This rare fitter is made by a skilled hand "spinning" process using what is called a break-down die. This is the reason it is so rare today as hand spinning is becoming a lost art.

ZV-12 Turn of the Century style brass bell fitter for 'shades. Slips 1/8 IPS thread; 2 3/4" tall

ZV-13 Turn of the Century style brass bell fitter for 6" shades. Slips 1/8 IPS thread; 3 1/2"tall























ZV-

