

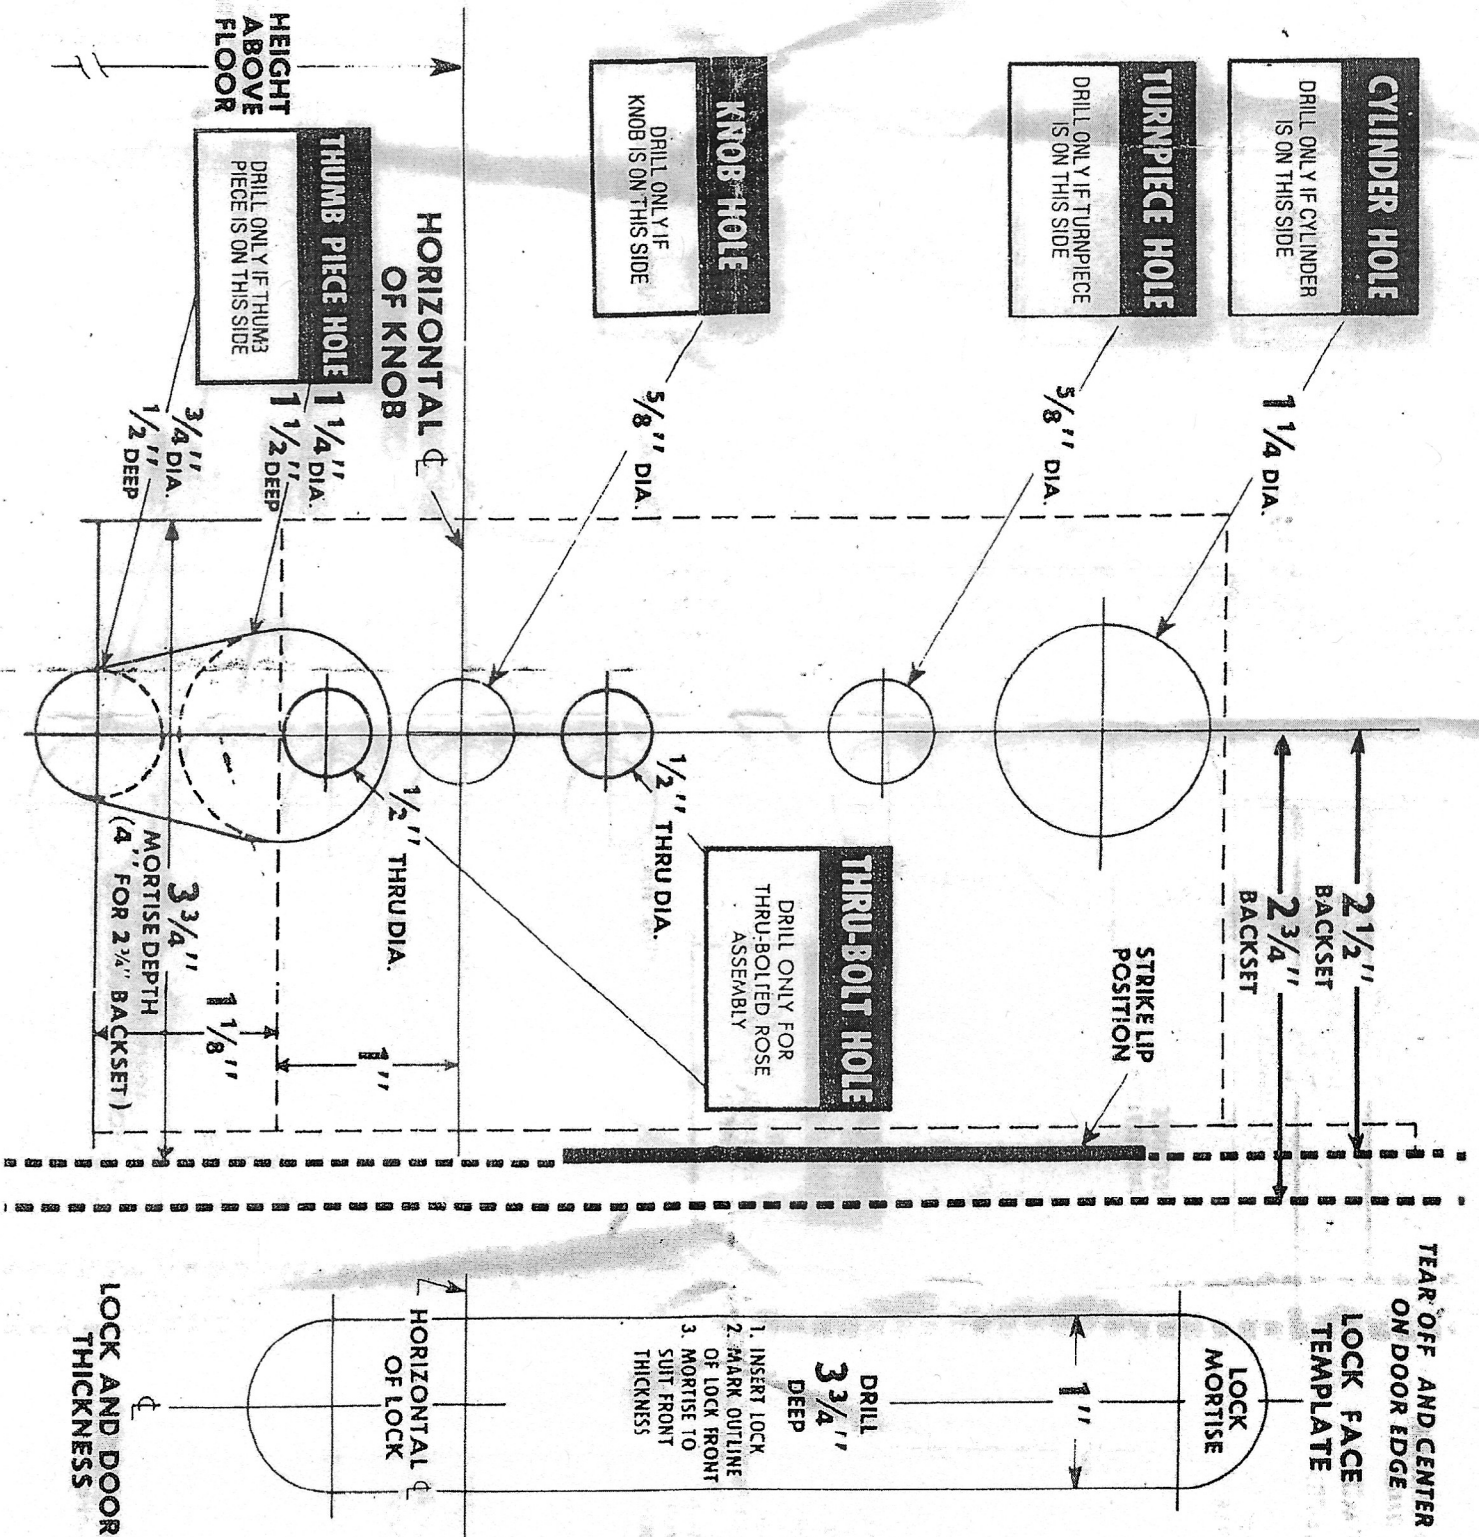


WITH 2 1/2" OR 2 3/4 BACKSET
FOR OPPOSITE SIDE OF DOOR —TURN TEMPLATE OVER

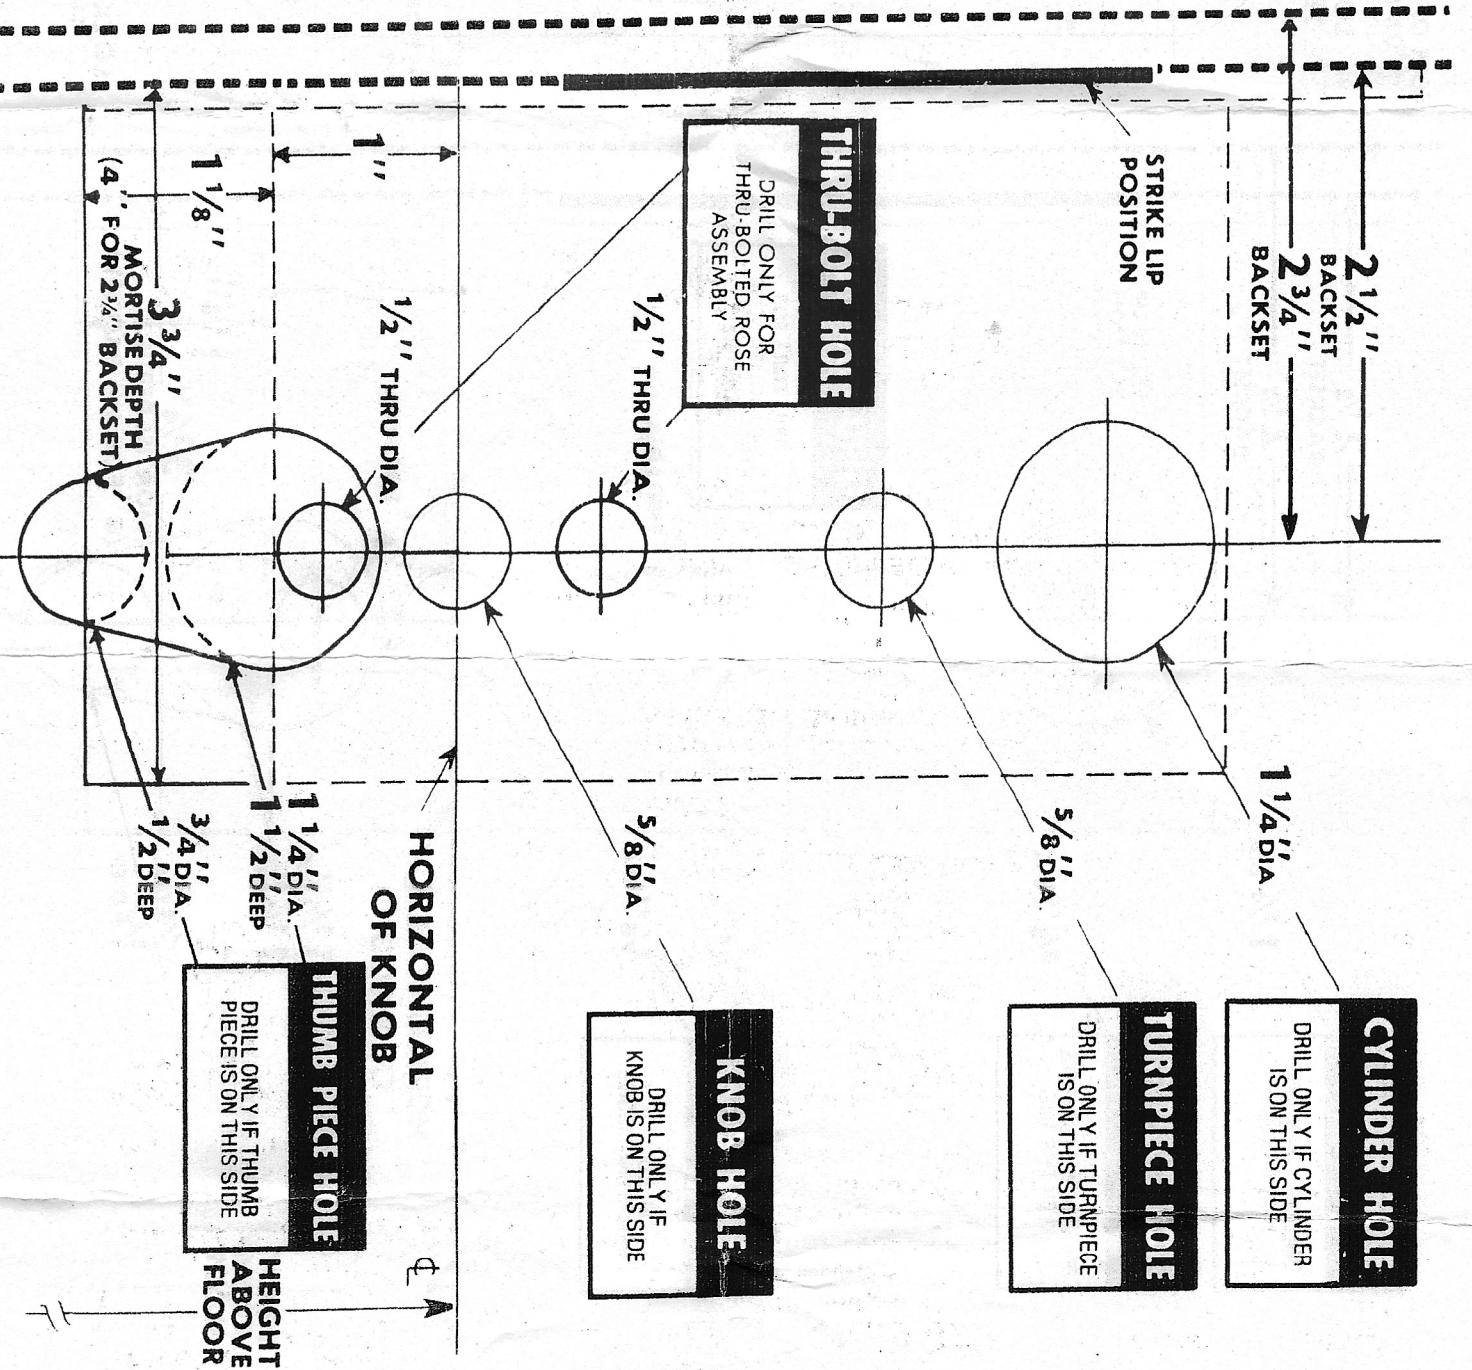

TEAR OFF AND CENTER
ON DOOR EDGE

LOCK FACE
TEMPLATE

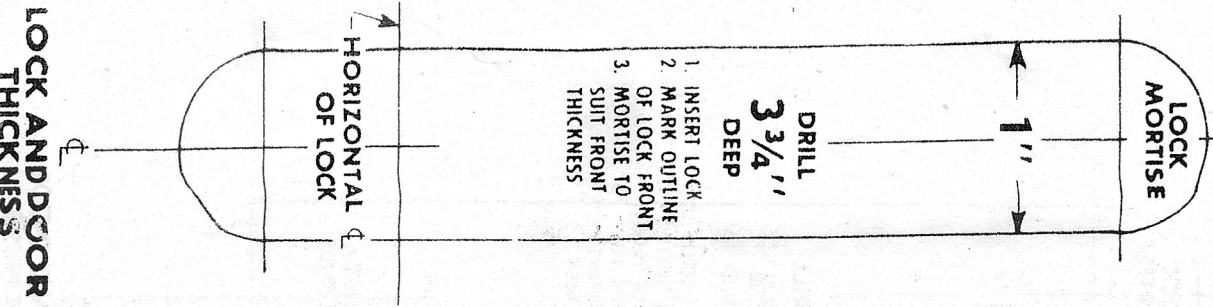

WITH 2 1/2" OR 2 3/4" BACKSET
FOR OPPOSITE SIDE OF DOOR - TURN TEMPLATE OVER


DOOR TEMPLATE

MORTISE LOCKSETS

INSTALLATION INSTRUCTIONS


HOW TO REVERSE HANDING

1. Remove cover.
2. Remove deadbolt spring, deadbolt lever and deadbolt. Remove latch, turn over and re-insert. Note position of washer. Replace deadbolt, deadbolt lever and deadbolt spring.
3. Press in, then remove long follower, turn over and re-insert so that lip is in the opposite hub.

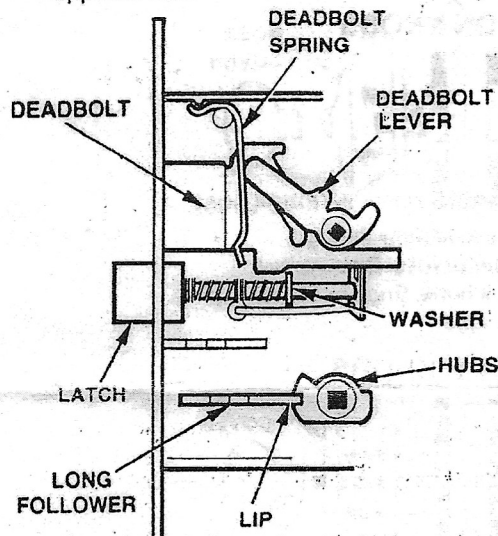


HOW TO BEVEL THE FRONT PLATE

1. Remove both cover plate and back plate.
2. Insert bevel pins top and bottom on either side of back plate.
3. Replace plates.

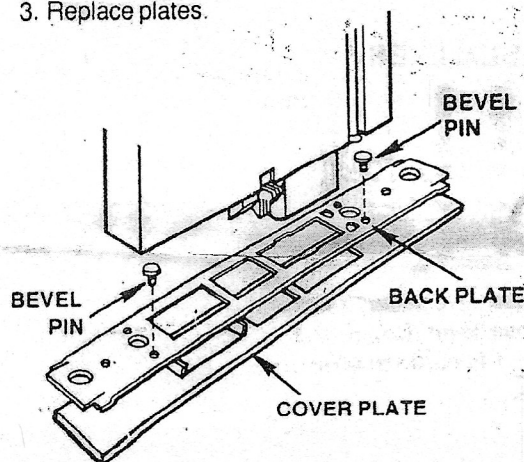

DOOR PREPARATION

1. Draw a horizontal line on both sides of door at the desired height of the knob above the floor.
2. Detach templates and position on edge and sides of the door for the REQUIRED BACKSET. Horizontal center line of the knob should line up with the horizontal line on the door. Mark the required holes ONLY. NOTE: If the strike already exists in the frame, position template using strike as reference. (See strike lip position on template).

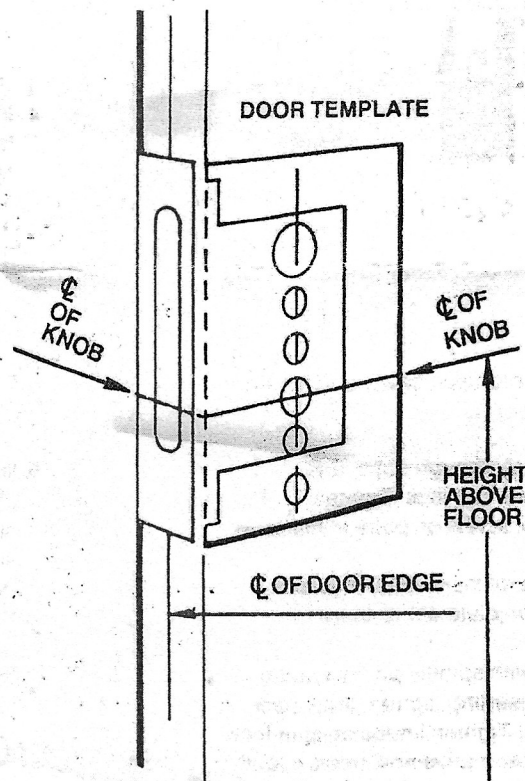

3. Mortise edge of door as per template and drill REQUIRED HOLES ONLY from EACH SIDE.
4. See installation diagrams for specific lockset installation instructions.